Assembly Instructions

Venetian Mini Chandelier # MX2019

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

For Swag Light:

1. Open the hardware package which is marked "For Swag Light".
2. Installing two ceiling hooks on ceiling. (One of them must be fastened on the edge of ceiling as Fig.1)

For plaster or plaster board ceilings (See Fig.2)

a. Drill a 5/8" hole in the ceiling where it is to be installed.
b. Thread the nipple into the ceiling hook.
c. Secure the toggle bolt on to the nipple.
d. Measure the thickness of ceiling, squeeze two flaps of toggle bolt together, and adjust the length (L) from toggle bolt to ceiling hook as you measured.
e. Insert the toggle bolt through the drilled hole to hook onto ceiling, and secure the ceiling hook tightenly.

For wood ceilings (minimum thickness size is 3/4" (See Fig.3)

a. Select a place on the ceiling where a wood beam exists.
b. Thread the dry wall screw into the ceiling hook.
c. Screw the assembly ceiling hook into the wood beam.

3. Cut the grounding wire near the loop.
4. Take a certain length of chain you need, then hang the links of chain to the ceiling hooks.
5. Thread the fixture cord through the ceiling hooks.
6. Follow steps 12~13 as for mini chandelier.
7. Insert the plug into wall receptacle, then control the lamp with the switch.

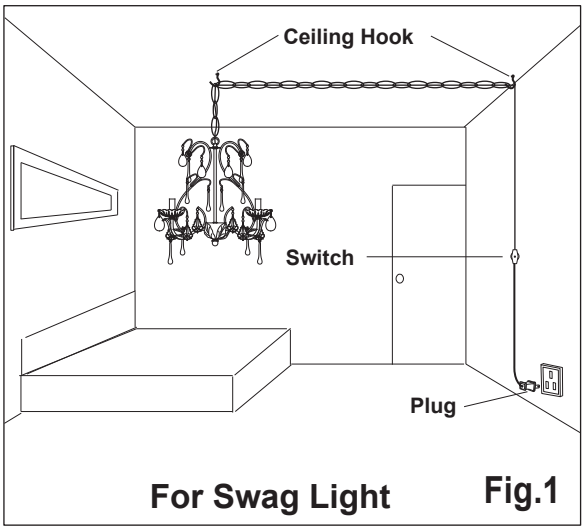

For Swag Light Fig.1

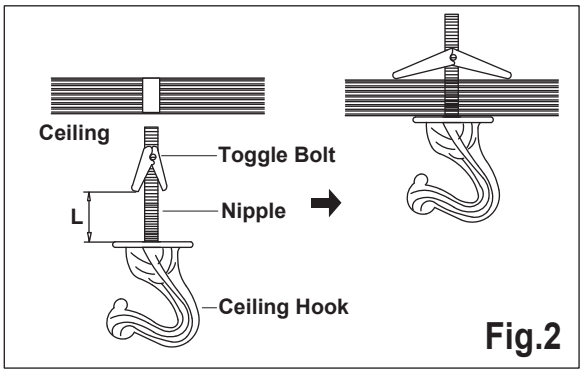

Fig.2

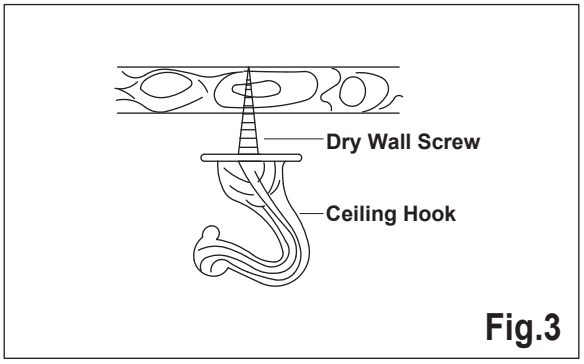

Fig.3

For Mini Chandelier:

1. Choose the length of the fixture wire and grounding wire, then cut redundant wires down.
2. Separate the smooth wire and ridged wire about three inches at the end of the fixture wire, and strip about 3/8 inch of insulation from the end of smooth wire and ridged wire.
3. Open the hardware package which is marked "For Mini Chandelier".
4. Attach the nipple to the mounting strap, then secure it with a washer and hex nut.
5. Attach the mounting strap to the outlet box by using two mounting screws.
6. Choose the length of the chain you need, then weave the fixture wire and the fixture grounding wire through the chain. Then connect one end of the chain with the loop by using the loop lock.
7. Secure the top loop to the nipple tightly.
8. Thread the fixture wire and fixture grounding wire through the collar, canopy, top loop, nipple and mounting strap.
9. Connect the other end of the chain with the top loop by using the loop lock.
10. Pull out the outlet wires and fixture house grounding wire from the outlet box. Make wire connections with wire nuts:
    ---The smooth wire (marked) from the fixture to the black wire from the power source.
    ---The ridged wire (unmarked) from the fixture to the white wire from the power source.
    ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.
    Carefully put the wires back into the outlet box.
11. Attach the canopy to the mounting strap by inserting the top loop, then secure it with the collar.
12. Attach the candle tubes and crystal caps onto the sockets. Then install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
13. Install the crystal drops as shown in diagram.
    Note: To replace broken crystal drops -Open the pins to remove the crystal drops, hook the new crystal drops, and then close back pins. Avoid bending the pins into sharp angle.
14. Turn on the power at the main fuse or circuit breaker box.

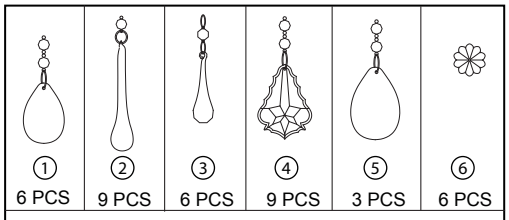

Note: Spare crystal drops are enclosed in hardware bag.